


[illegible]

WARRANTY: THE FOLLOWING IS MADE IN LIEU OF ALL WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Equipment offered by SafeWaze is warranted against factory defects in workmanship and materials for a period of one year from date of purchase or first use by the original owner.


LIMITATION OF LIABILITY: IN NO EVENT WILL SAFEWAZE BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, IN ANY WAY RELATED TO THE PRODUCTS REGARDLESS OF THE LEGAL THEORY ASSERTED.

The logo for SafeWaze features a stylized black icon on the left, resembling a lighthouse or a tower with a circular base and a beam of light. To the right of the icon, the word "SAFEWAZE" is written in a bold, black, sans-serif font, followed by a trademark symbol (TM).

10,000-lbf / 44kN
Model: FS-EX110
Made in USA

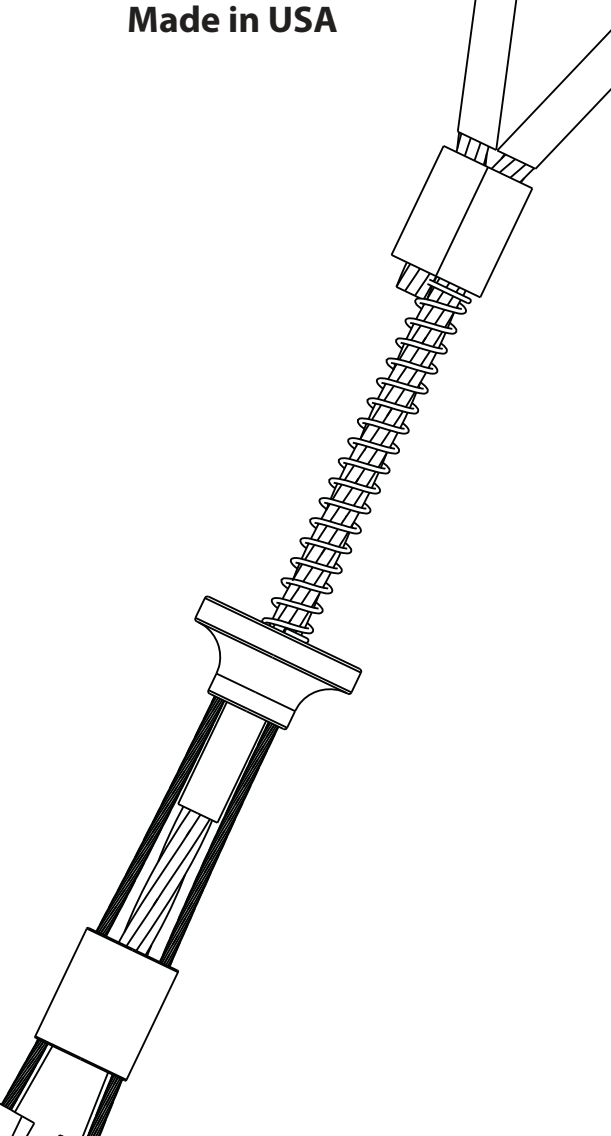


A detailed technical line drawing of the FS-EX110 cable assembly. The drawing shows the entire assembly from a side perspective. At the top, there is a large, rounded, looped end of the cable. This is connected to a rectangular housing that contains a coiled spring. The spring extends downwards and is attached to a flange. Below the flange, the cable continues as a braided structure, passing through a rectangular housing. At the bottom, the cable splits into two separate ends, each with a rectangular connector. The drawing is a black and white line art, showing the internal components and the overall structure of the assembly.

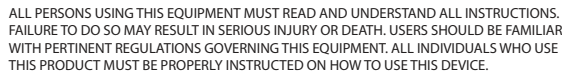

⚠ WARNING ⚠

Cleaning periodically will prolong the life and proper functioning of the product. The frequency of cleaning should be determined by inspection and by severity of the environment. Clean with compressed air and/or a stiff brush using plain water or a mild soap and water solution. Do not use any corrosive chemicals that could damage the product. Wipe all surfaces with a clean, dry cloth and hang to dry, or use compressed air. When not in use, store anchorage connectors in a cool, dry, clean environment, out of direct sunlight and free of corrosive or other degrading elements.

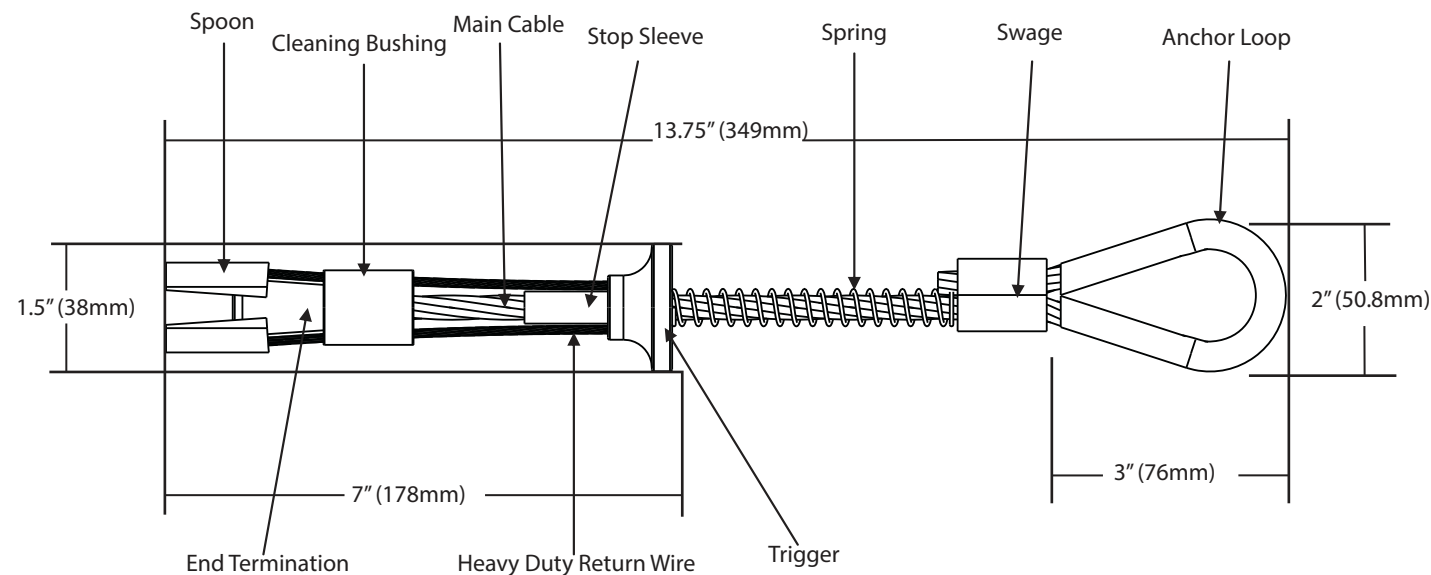

PERFORMANCE:
Static Tensile Strength: 10,000-lbf (44kN)
Maximum Capacity: One worker with max weight of 310-lbs when used as a single point anchorage connector for personal fall arrest or restraint system

DIMENSIONS:
Weight: 1-lbs (453g)
Length: 13.75" (349mm)
Diameter 1" (25mm)



REGULATORY COMPLIANCE:
ANSI Z359.1(07), ANSI Z359.7(11),
OSHA 1926.502, OSHA 1910.66

COMPONENT MATERIALS:

Aluminum: Trigger
Aircraft Cable: Main Cable, Activator Wire
Polyurethane: Loop Cover
Stainless Steel: Cone, Spoons, Stop Sleeve
Zinc Plated Steel: Spring
Zinc Plated Copper: Swage


DRILLING & INSTALLATION INSTRUCTIONS:

1. Drill a 1" (25mm) diameter hole at least 4.5" (114mm) deep. The drilled hole must be straight and perpendicular to the surface. Make sure the hole is of uniform diameter and free of peaks and valleys on the inner wall.
2. Blow hole clean with compressed air.
3. Always inspect the hole carefully when reusing a previously drilled hole.
4. When placing anchor, place your thumb inside the anchor loop and your first two fingers around the trigger. Squeeze fingers and thumb together till the trigger and spring fully compress.
5. Insert unit at least 4" (101mm) deep into hole and release the trigger. Do not force.
6. Set the unit with a slight tug on the anchor loop.
7. The stop sleeve must always be partially inserted into the hole.

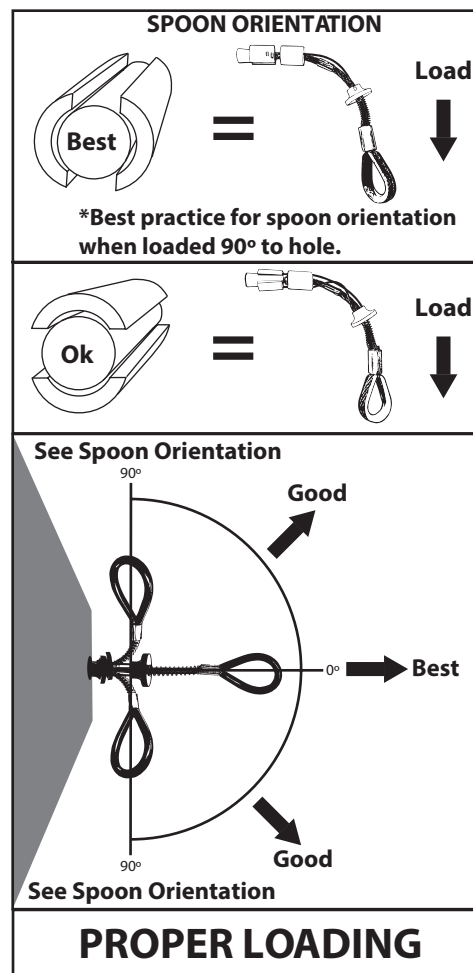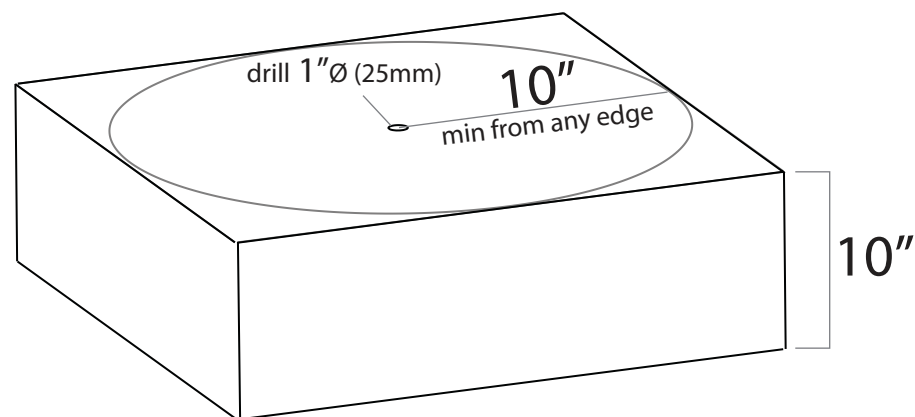

REMOVAL INSTRUCTIONS:


1. When removing anchor, place your thumb inside the anchor loop and your first two fingers around the trigger. Squeeze fingers and thumb together till the trigger and spring fully compress.
2. While squeezing the trigger pull the anchor out of the hole.
3. If the anchor becomes stuck, insert a punch, screwdriver or other object into the hole until it touches the top of the cleaning bushing.
4. Lightly tap with a hammer making sure the tool is touching the top of the cleaning bushing while squeezing the trigger (cleaning bushing should be easily visible at the edge of the hole).
5. If tool was required to remove the anchor, inspect thoroughly for damage after removal. If damage is found remove from service and destroy immediately.

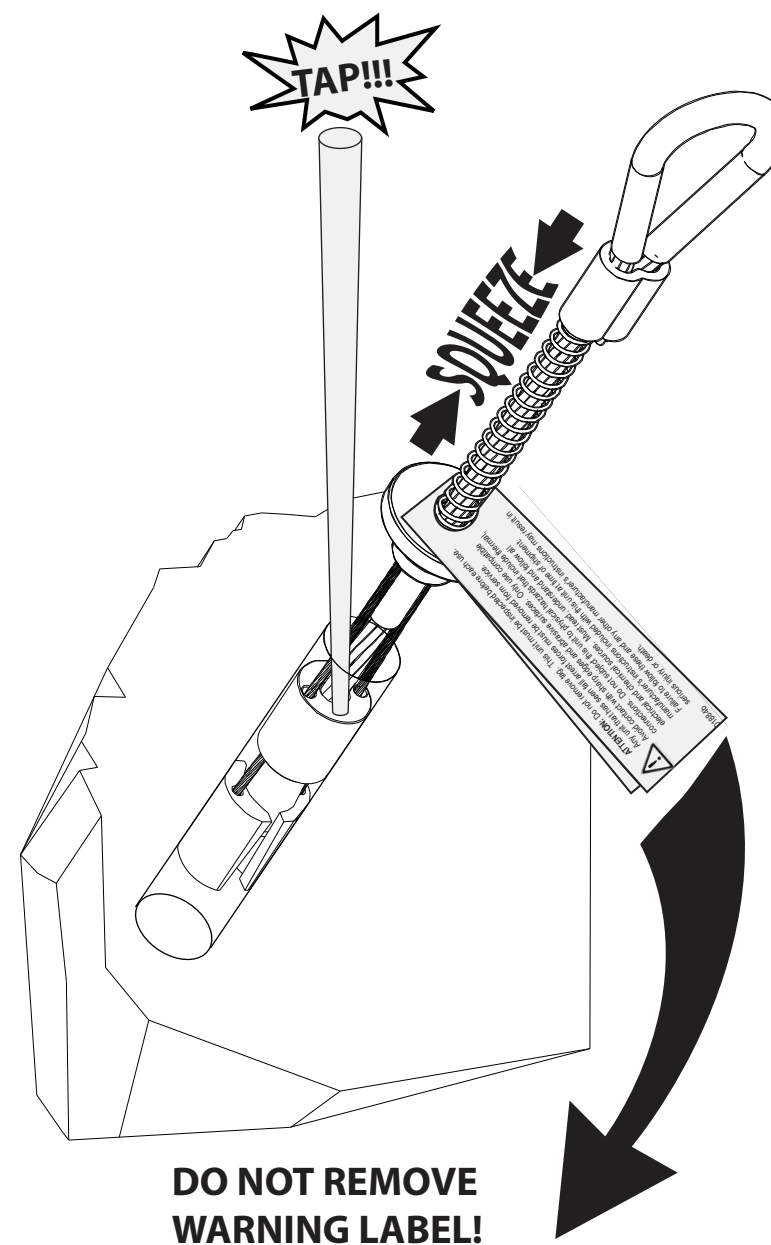

ATTENTION: Do not remove tag. This unit must be inspected before each use. Any unit that has seen fall arrest forces must be removed from service. Avoid contact with sharp edges and abrasive surfaces. Only use compatible connections. Do not subject this unit to physical hazards that include thermal, electrical and chemical sources. Must read, understand and follow all manufacturer's instructions included with this unit at time of shipment. Failure to follow these and any other manufacturer's instructions may result in serious injury or death.

SAFEWAZE FS-EX110 | Removable Bolt Anchor
SERIAL #: xxxxxxx
MFG DATE: MM/YYYY
MATERIALS: Stainless steel; aluminum; zinc plated copper; 7x19 aircraft cable
WEIGHT CAPACITY: 310 lbs
MINIMUM BREAKING STRENGTH: 10,000 lb / 44.5 kN
MEETS: OSHA 1910.66 & 1926.502; ANSI Z359.1

May be used as an anchor point for a leading edge restraint system. See optional anchor points below for example. The use of two anchors is not required for leading edge restraint systems unless otherwise specified by the manufacturer.

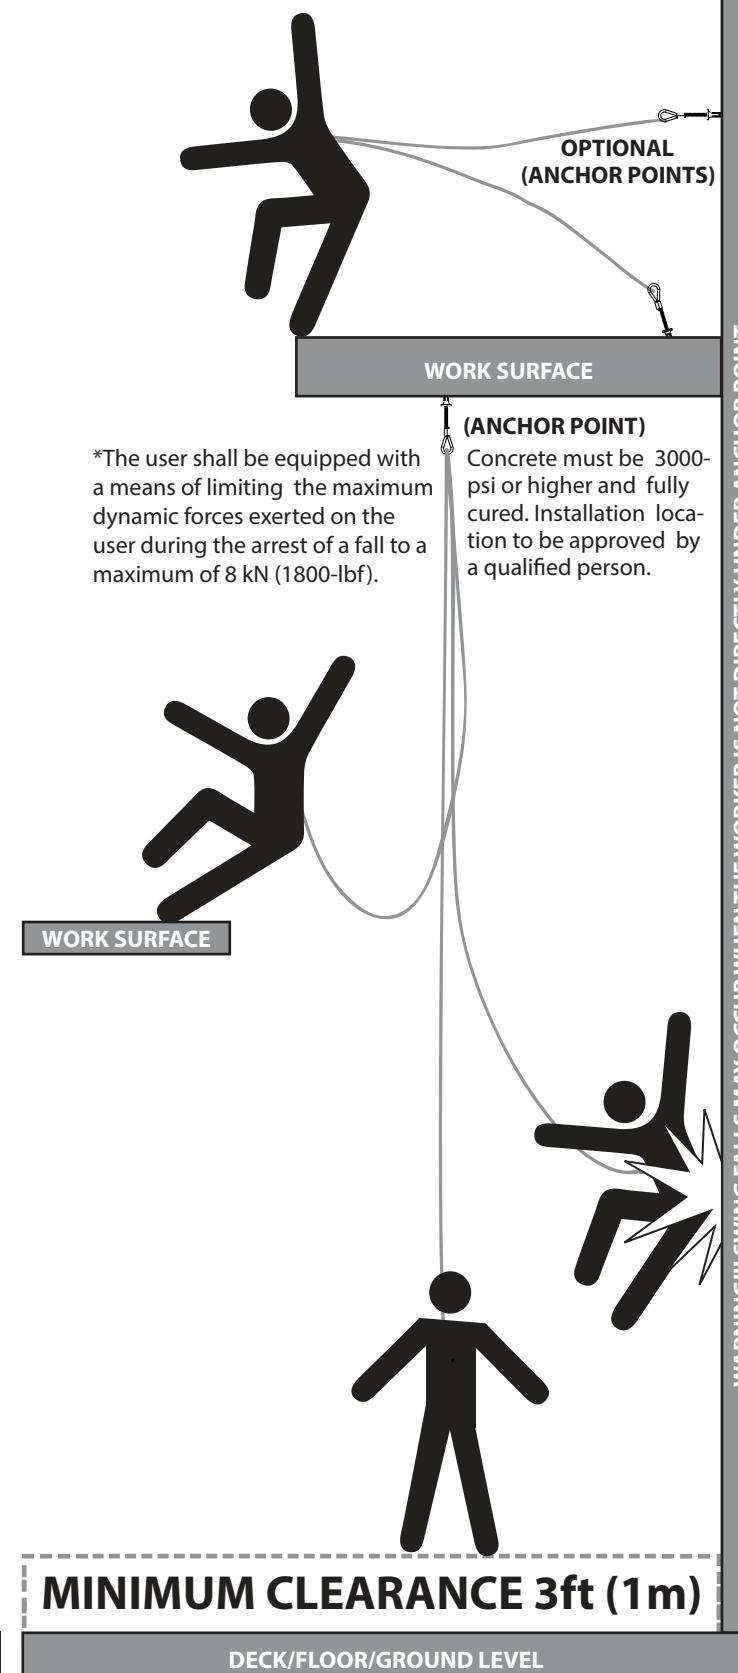

MINIMUM CLEARANCE 3ft (1m)

All products subjected to fall arresting forces should be removed from service immediately!